

SOLINTEG DATALOGGER PARALLEL SOLUTION

—202408

INTEGRATE SOLAR INTELLIGENTLY




1 INTRODUCTION

The Solinteg RML-1000 is an intelligent energy management device specially designed for the inverter industry.

It achieves efficient use and management of energy by integrating inverters, batteries, and other devices into a single platform. RML-1000 can help users maximize energy utilization, reduce energy costs, and improve energy reliability and sustainability through data collection, analysis and optimization.

With the RML-1000, you can connect up to 90 on-grid inverters and 10 hybrid inverters, allowing owners to manage multiple solar plants simultaneously.

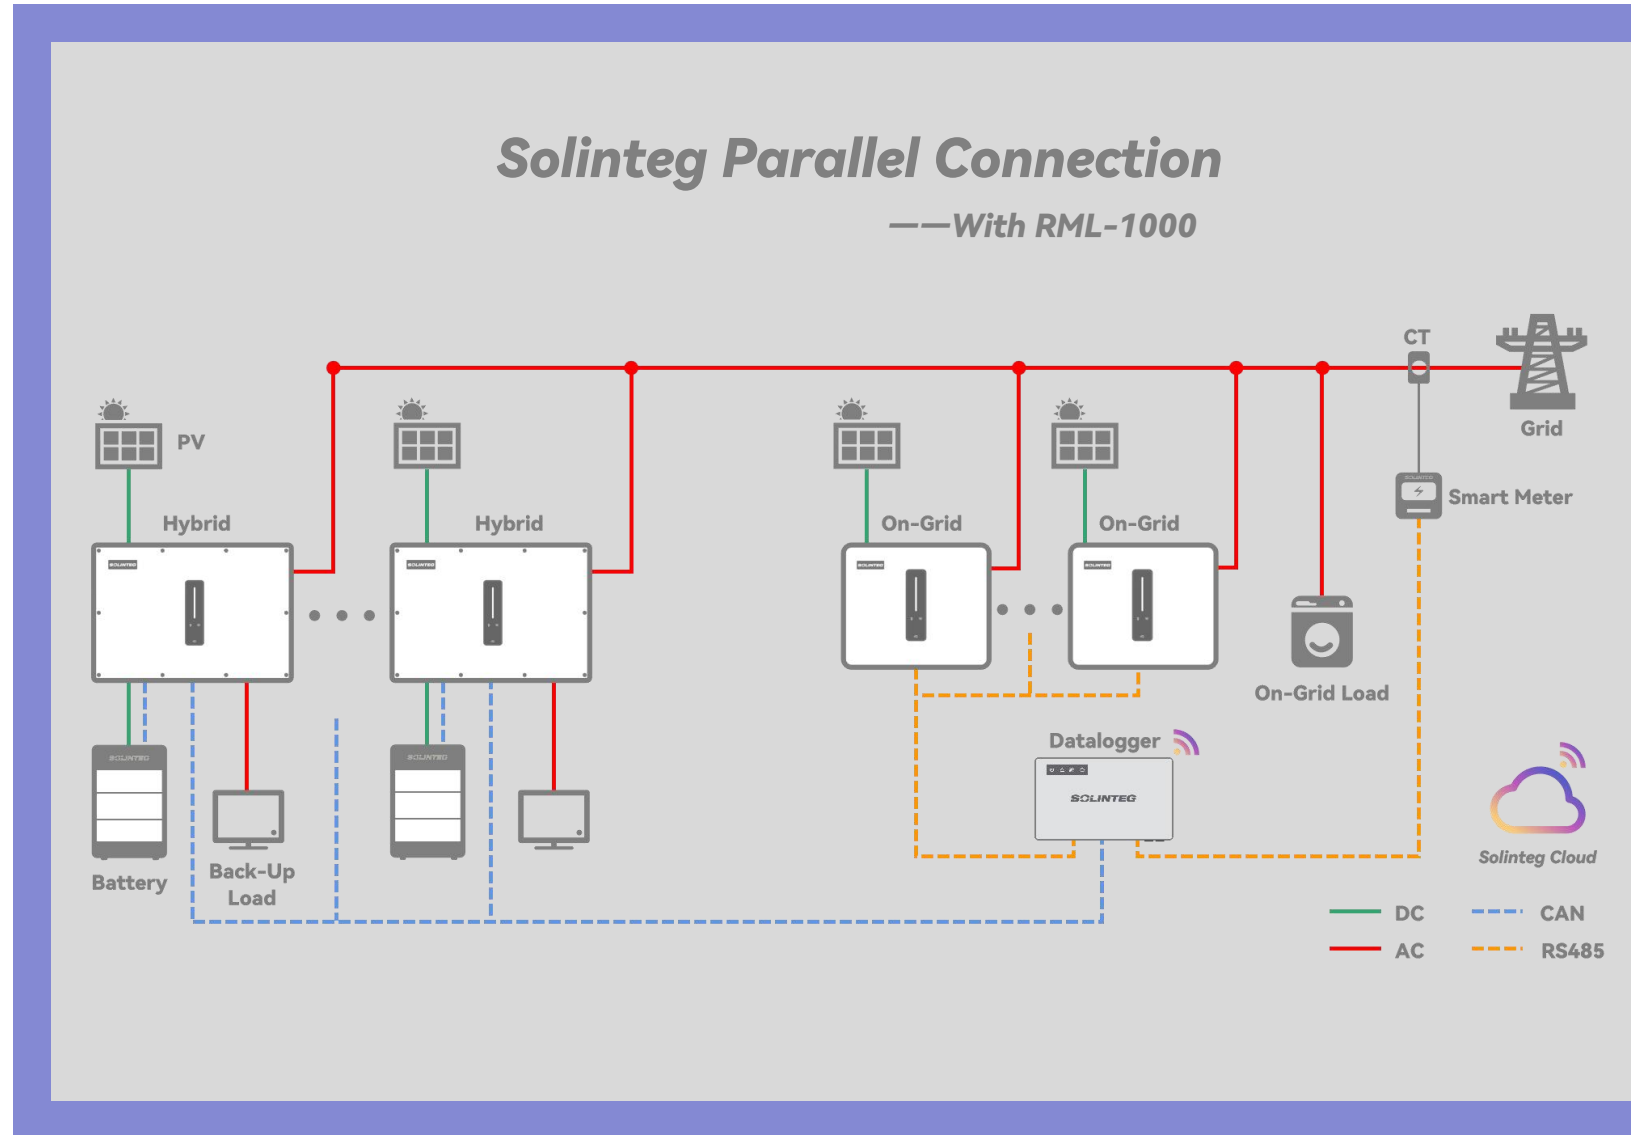

2 APPLICATIONS

Multiple On-grid Inverters Parallel

Support up to 90 units on-grid inverter parallel connection

Energy Storage Plants Parallel

Support up to 10 units hybrid inverter parallel connection


Mixed Plants Parallel

Support different types inverter parallel connection

3

ON-GRID INVERTER

WIRING DIAGRAM

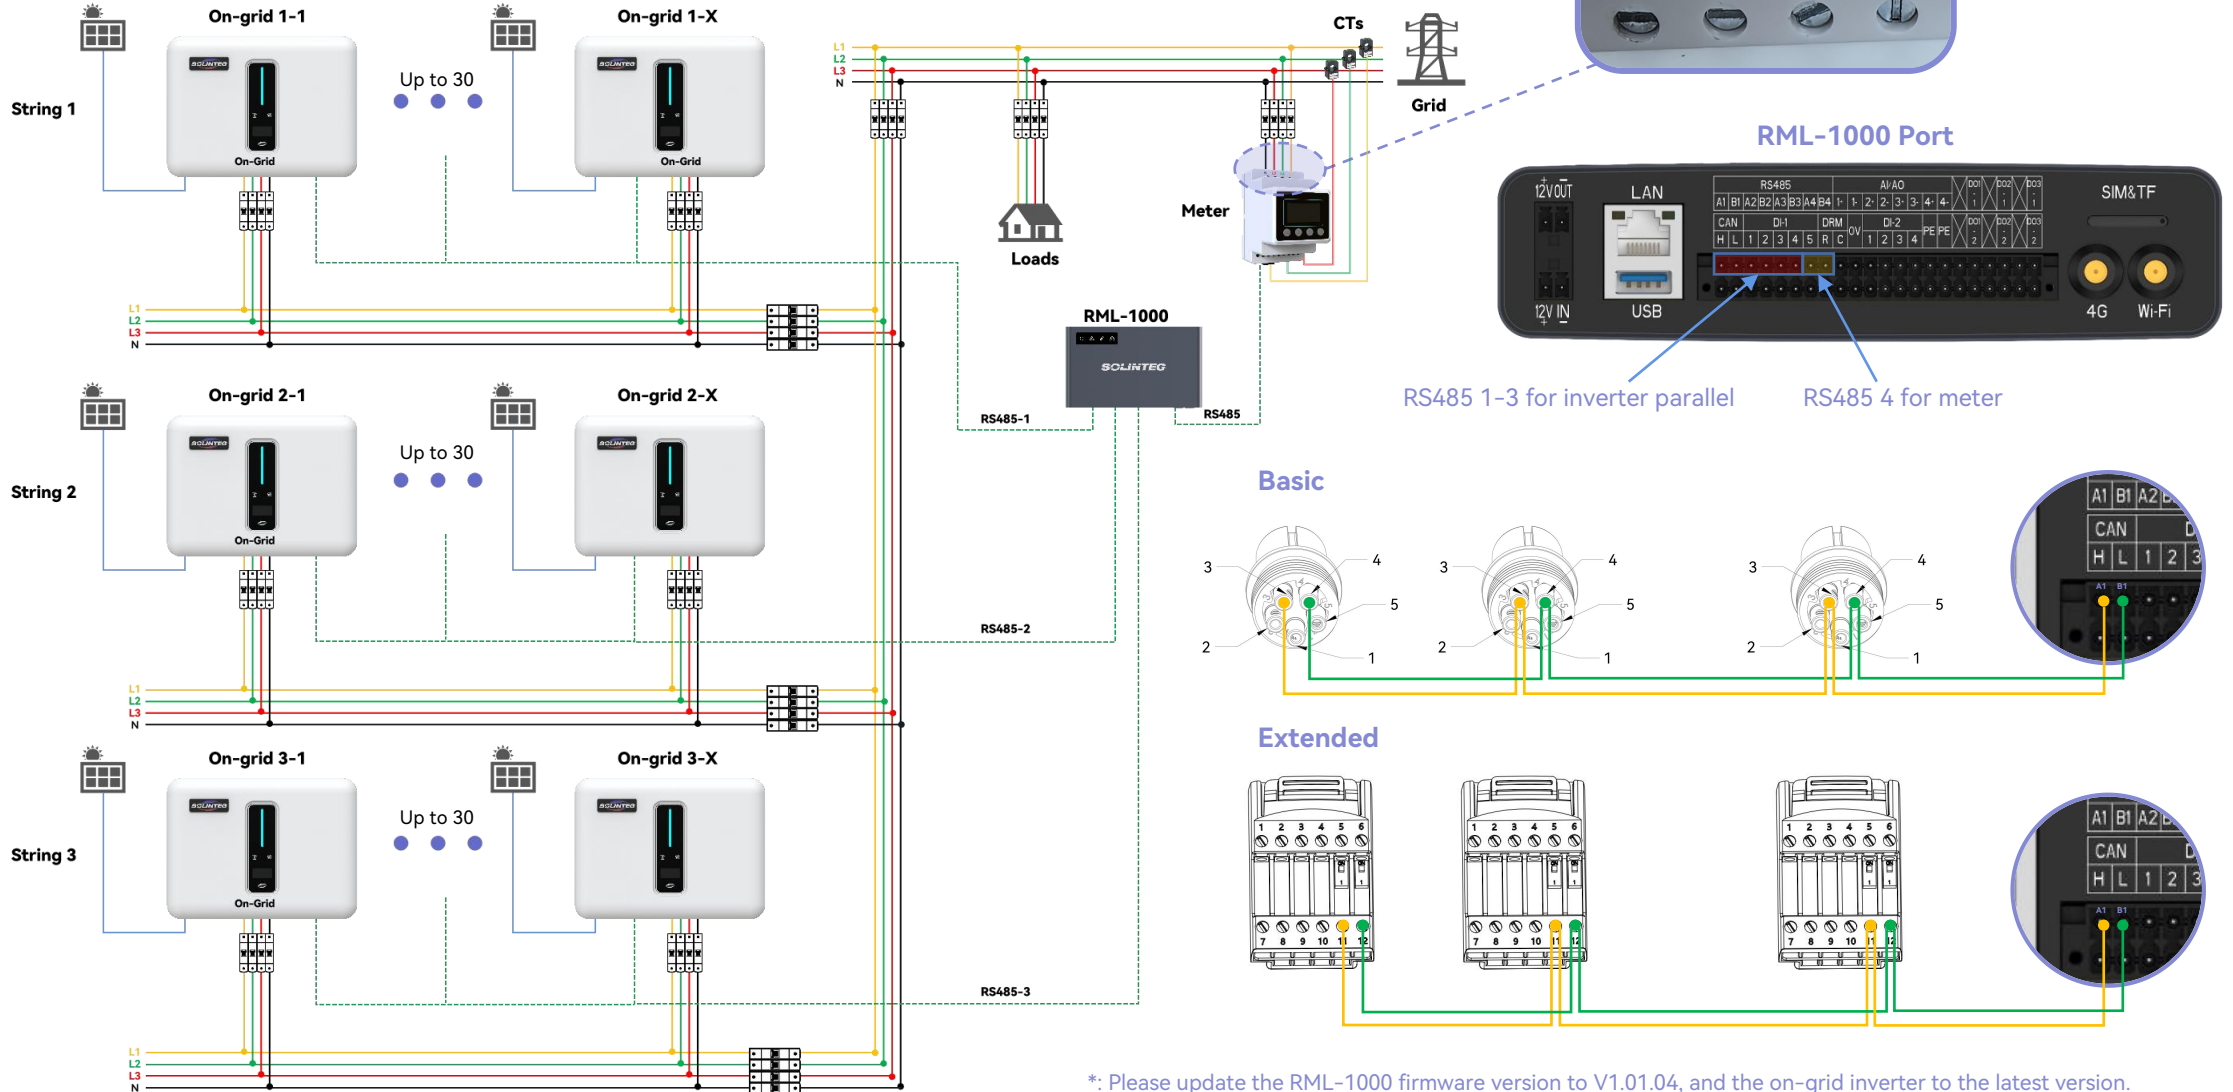


*: Please update the RML-1000 firmware version to V1.01.04, and the on-grid inverter to the latest version.

4


HYBRID INVERTER

WIRING DIAGRAM

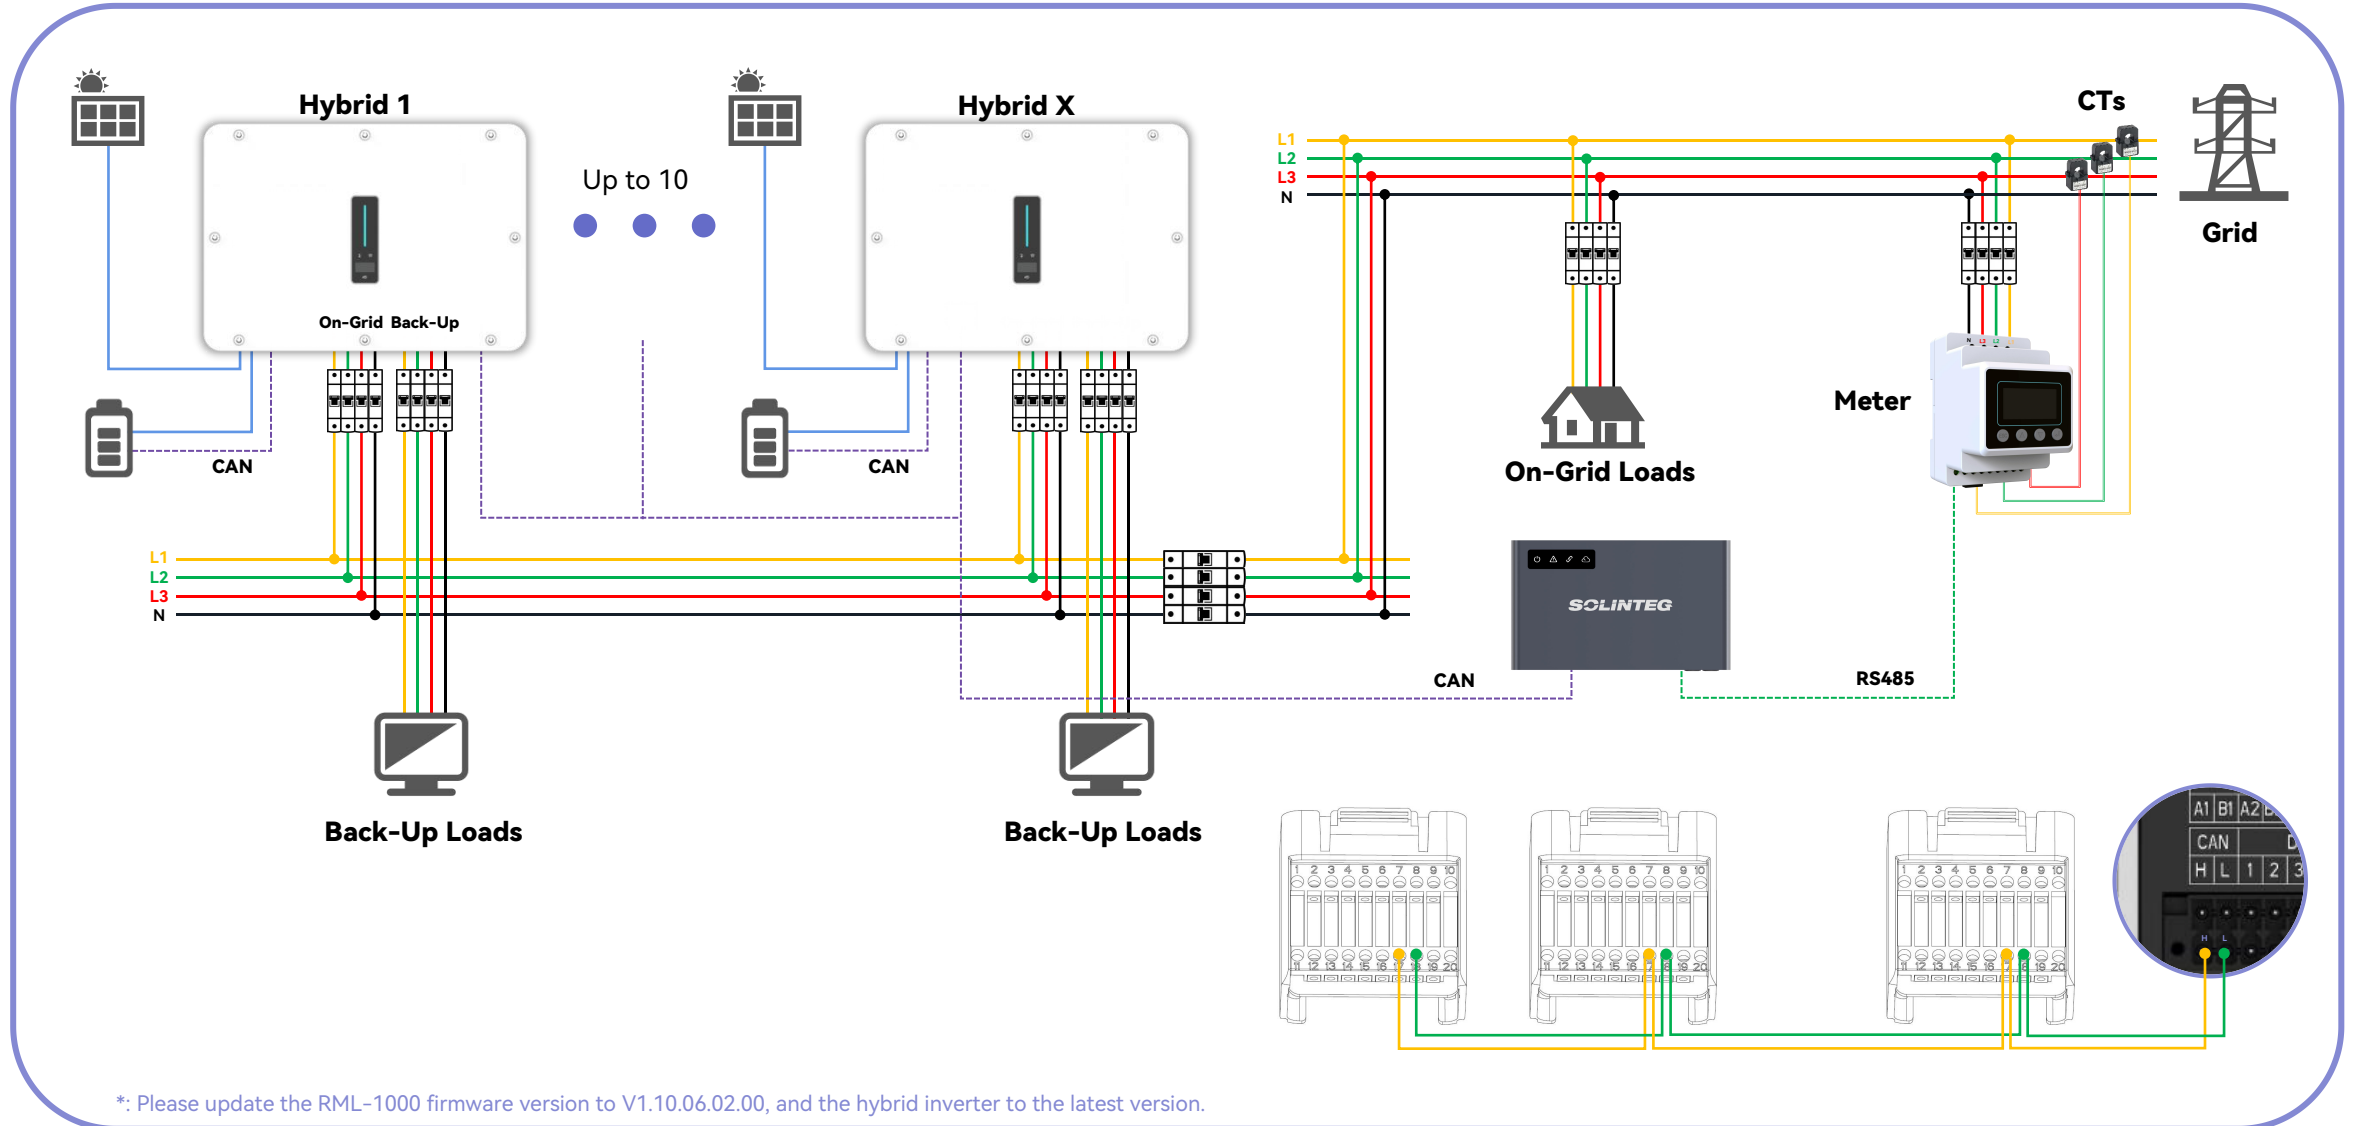

*: Please update the RML-1000 firmware version to V1.10.06.02.00, and the hybrid inverter to the latest version.

MIXED INVERTER WIRING DIAGRAM

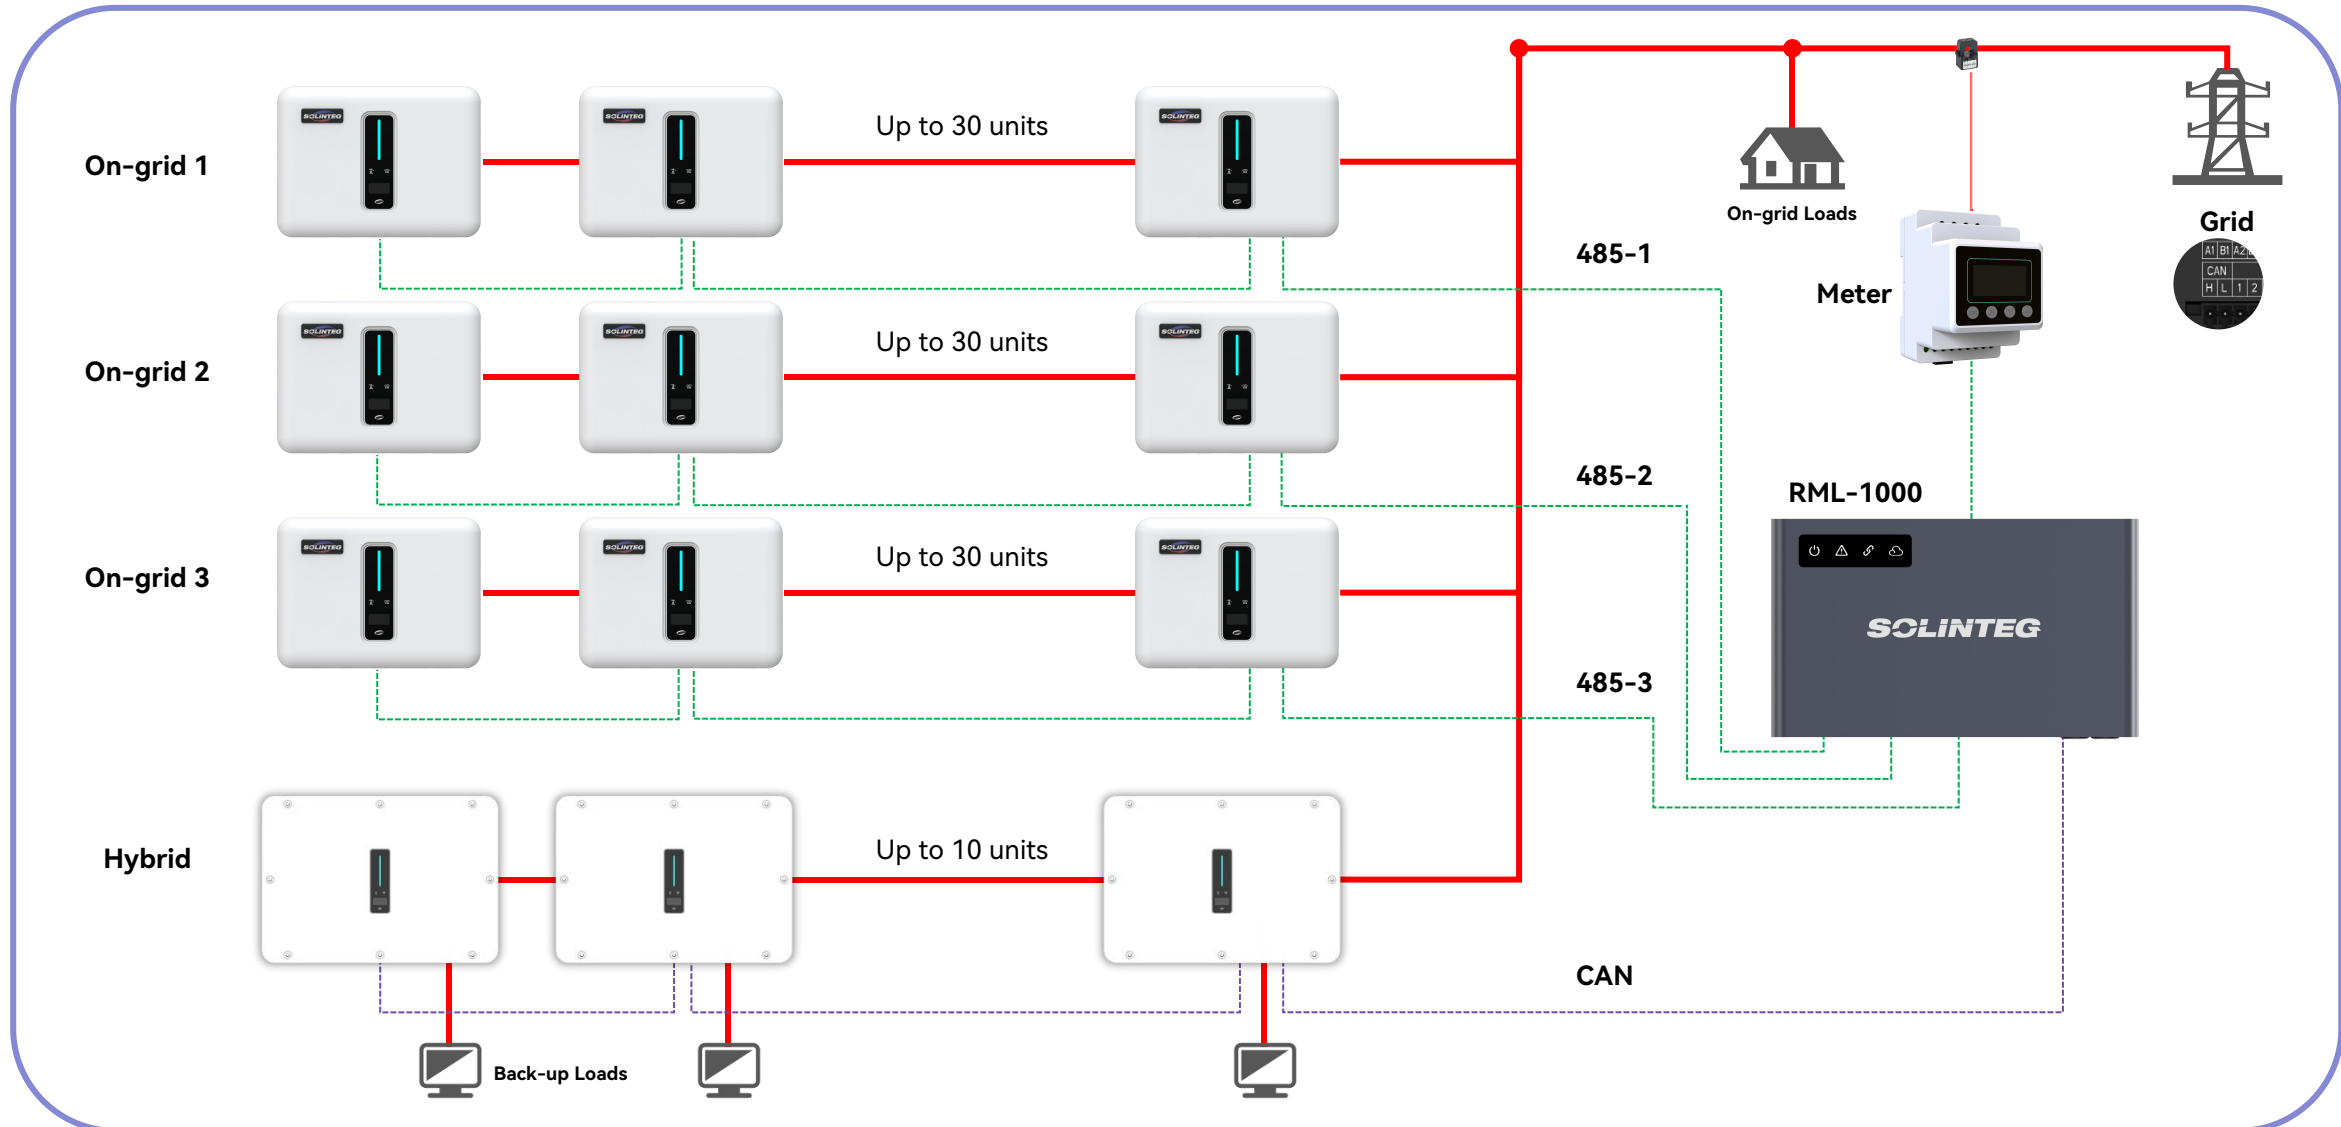




CONFIGURATION

WIRING & PREPARATION

Step1:

Connect your PC to RML-1000 by network cable.

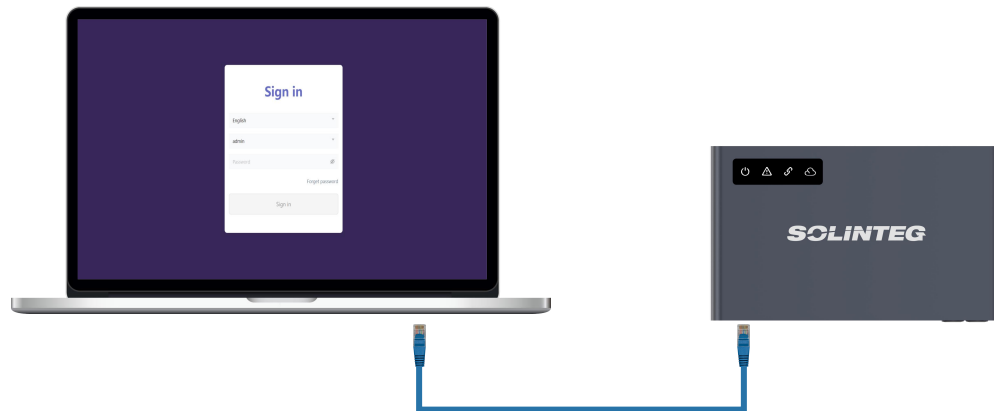

Step2:

Set your PC IP address as below.

Path: *Settings / Network and Internet / Ethernet*

Setting	Value
Operation Mode	Manual
IPv4 Status	On
IPv4 IP Address	18.18.18.30
IPv4 Subnet Mask	255.255.255.0
IPv4 Gateway	18.18.18.1
Preferred DNS	8.8.8.8
DNS over HTTPS	Off
Alternate DNS	

Manual Operation

IP Address: 18.18.18.X (X: 2-254)

Subnet Mask: 255.255.255.0

Gateway: 18.18.18.1


DNS: 8.8.8.8

OFF




CONFIGURATION

SIGNIN & GUIDE

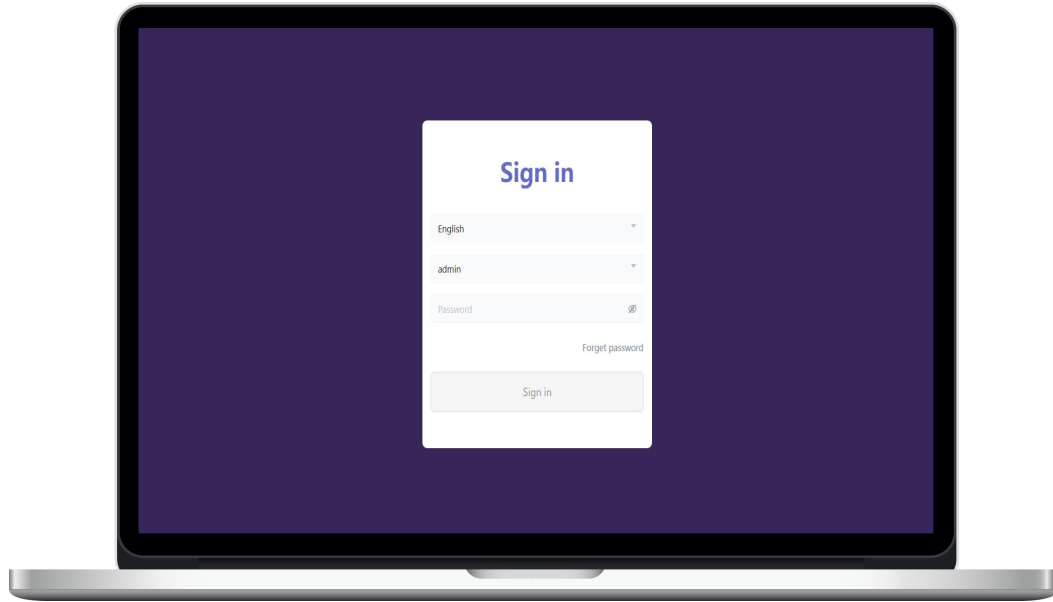

Sign in:

- Enter 18.18.18.18 on your browser.
- Select the language and enter the password. The password is the device check code on the nameplate.

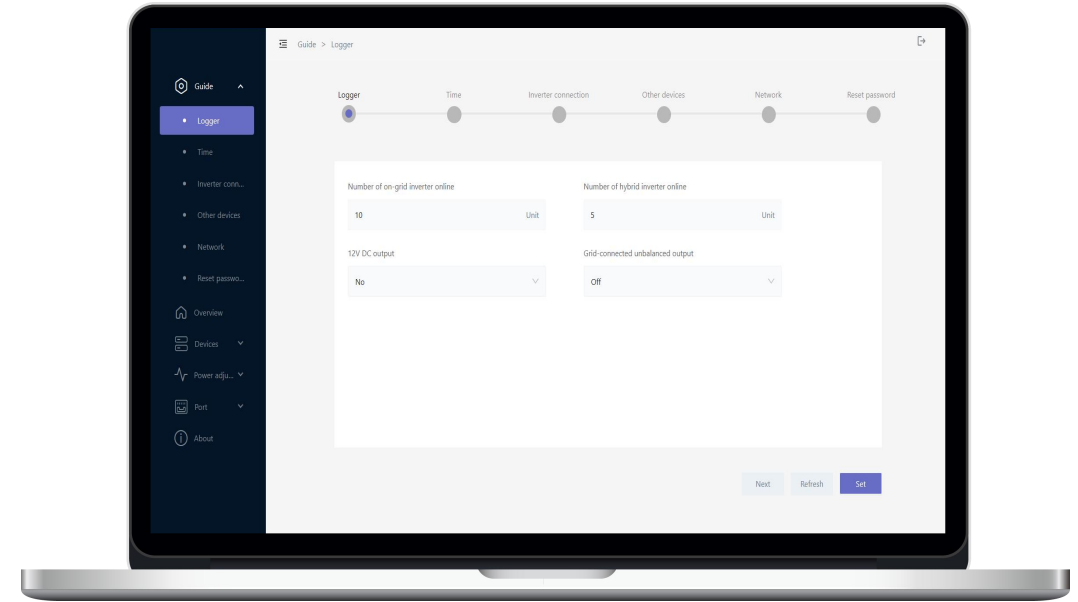



Guide:

For the first time configuration, please follow the guide order. Incorrect configuration order may cause data error.



CONFIGURATION

SET THE NETWORK

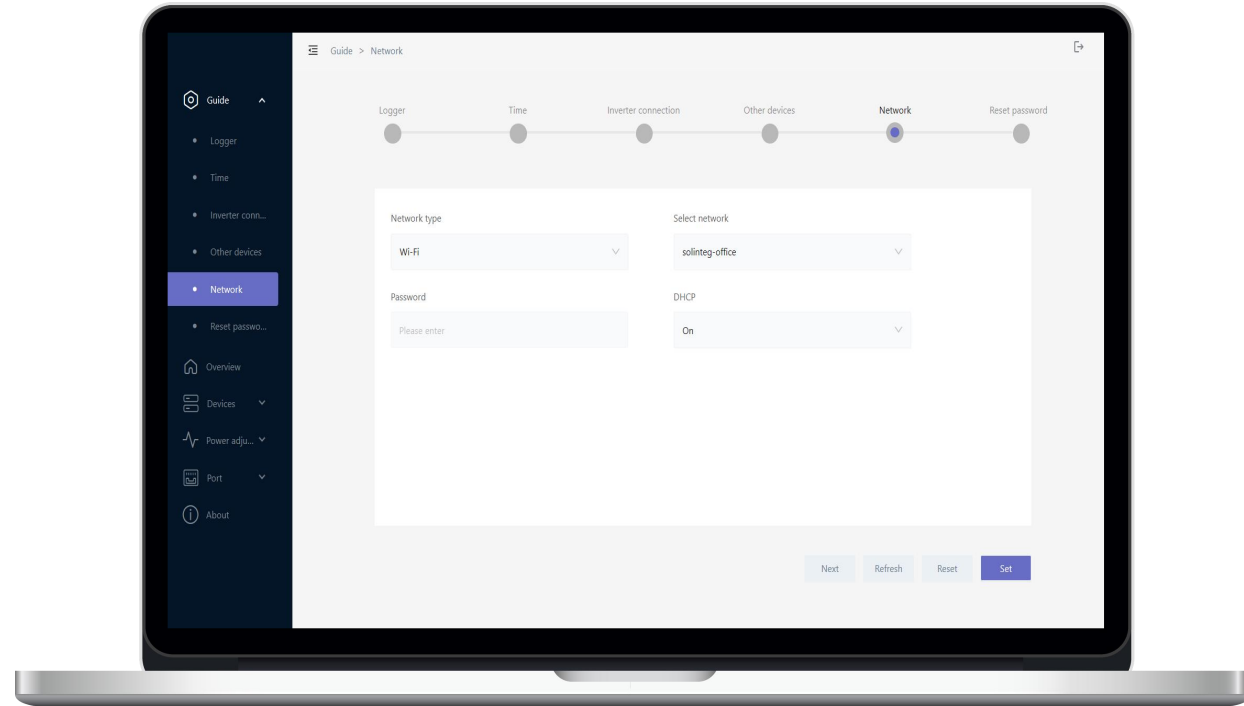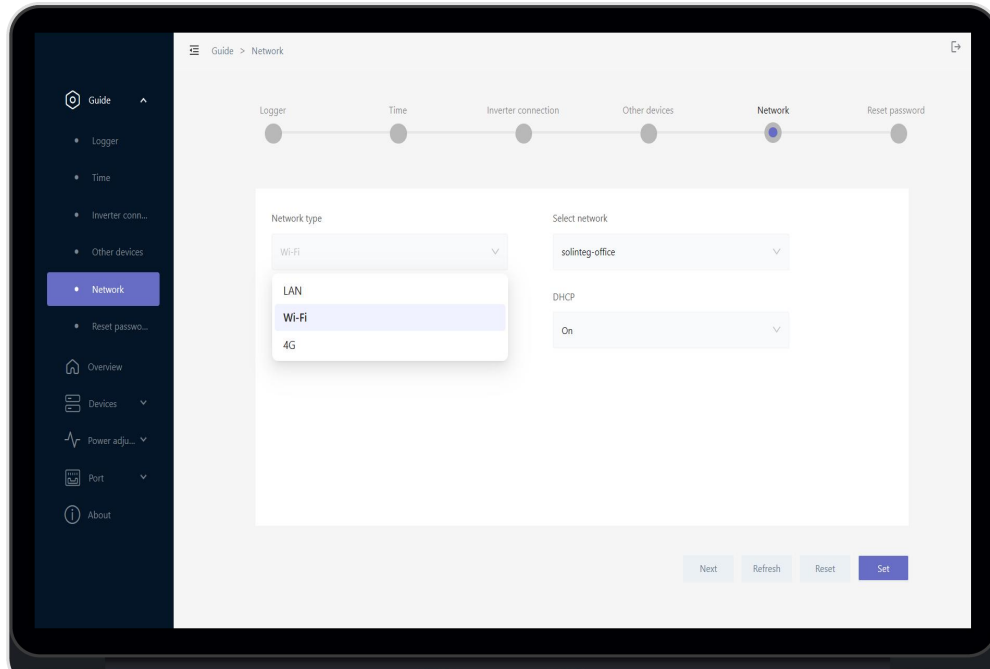


Network:

- Choose your network type: 4G/LAN/Wifi.
- If you are using the LAN, please reconnect the cable to RML-1000 after the configuration.




CONFIGURATION

ADD THE INVERTER

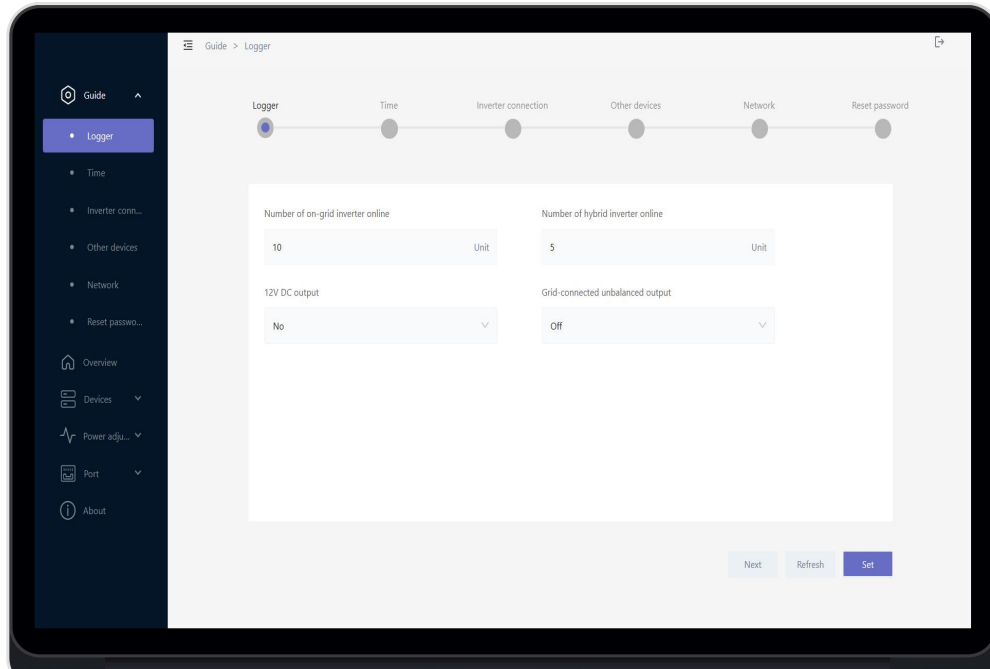

Step 1:

Enter the on-grid or hybrid inverter number you connected to the datalogger on the 'Logger' page.

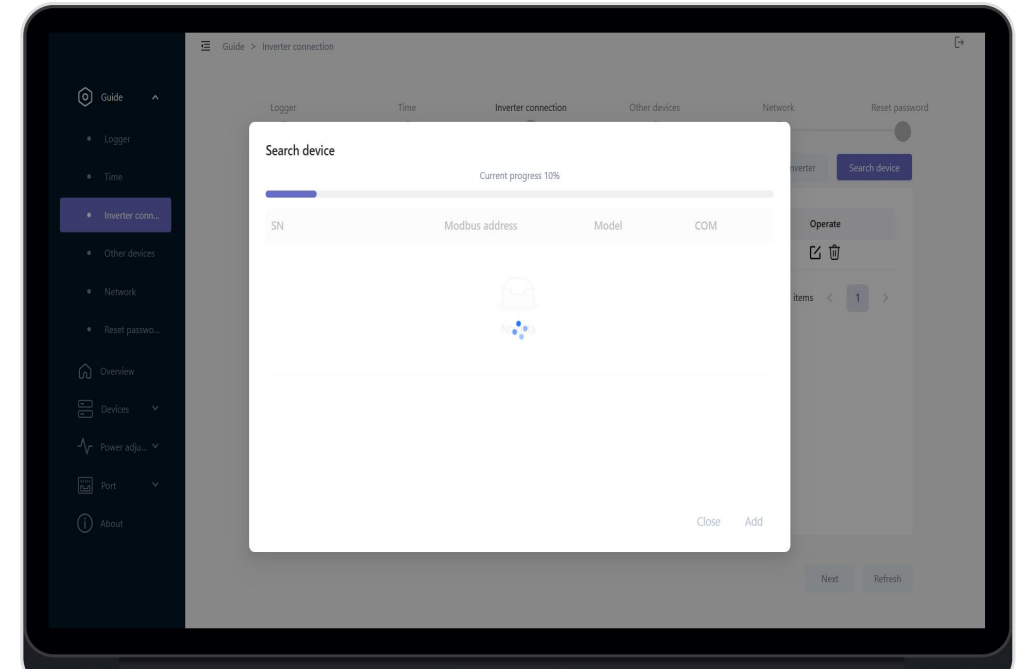


Step 2:

Click the 'Search Device' button at the inverter connection page. Add them into the logger. The logger will search the inverter and distribute the address automatically.




CONFIGURATION

ADD THE METER

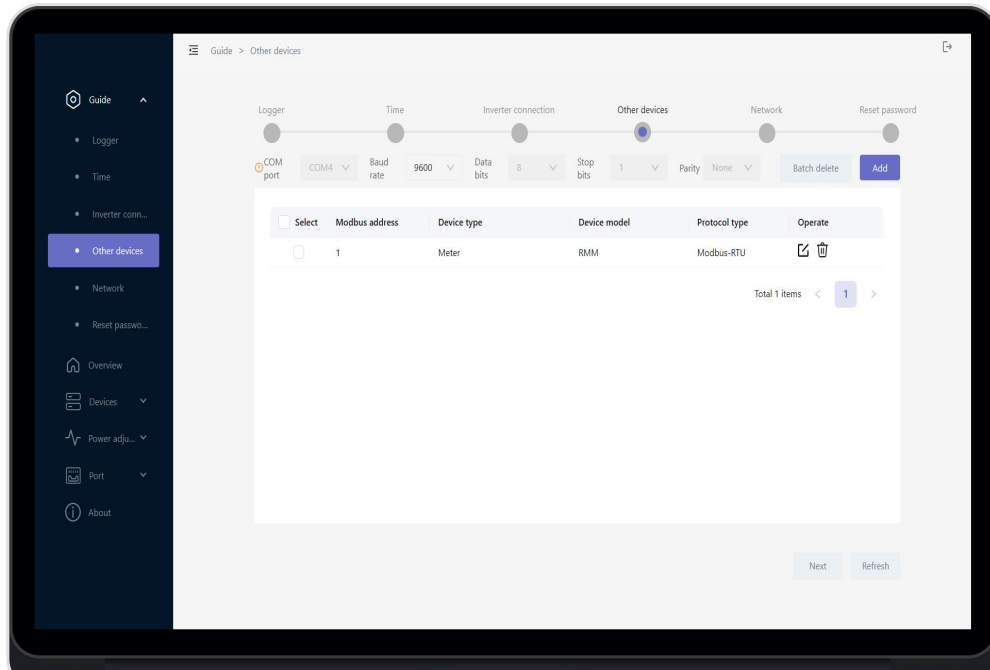

Step 1:

Click the 'Add' button at the other devices page.

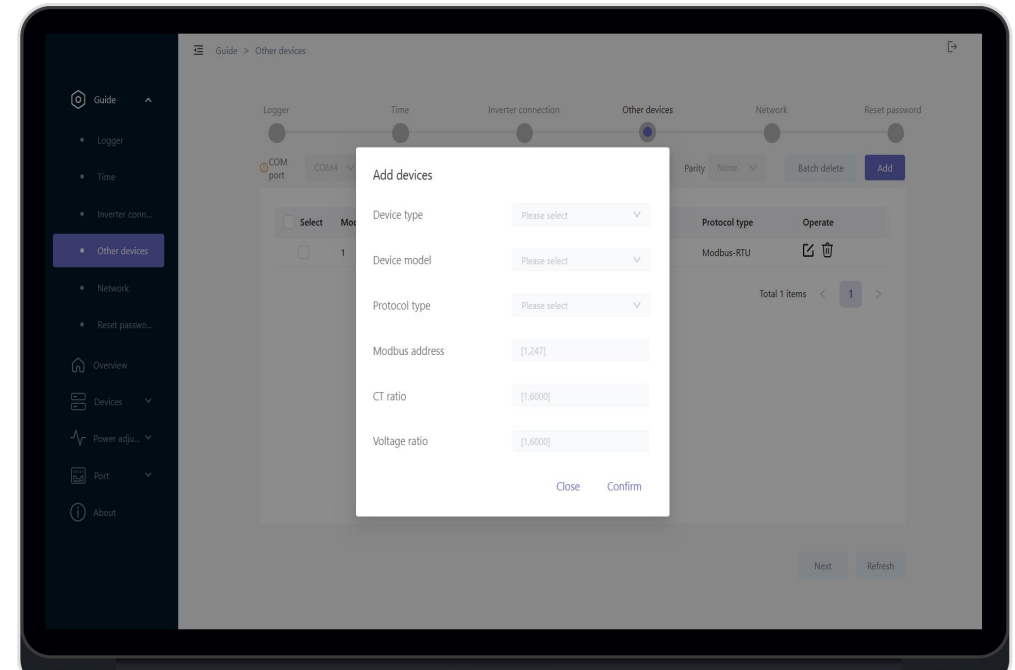

Step 2:

Input the info at the configuration page. The meter modbus address is fixed to 1.



END

Visit Solinteg website to find out more

INTEGRATE SOLAR INTELLIGENTLY