

INTEG **M** HYBRID INVERTER

M2HS-3/3.6/4.2/4.6/5/6K-30





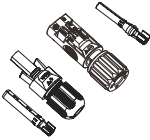
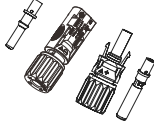
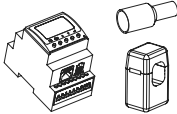




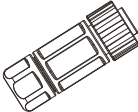
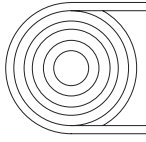

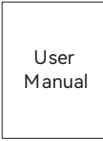


Quick Installation Guide


ENGLISH VERSION

1 Installation

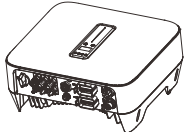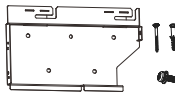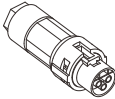
A Packing List

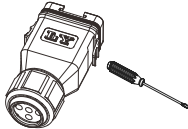			
1 Inverter (1pcs)	2 Inverter bracket (1 pcs), Bolt assembly (5 pcs), M5 screws (1 pcs)	3 On-grid AC connector set (1 pcs)	4 Back-up AC connector set (1 pcs)
			
5 PV connector (1 pair for M2HS-3K, 2 pairs for M2HS-3.6K-6K)(Black, U-profile pin)	6 Battery connector (1 pair) (Blue, O-profile pin)	7 Meter with CTs (1 set, optional)	8 CT (1pcs)
			
9 Communication module (1 pcs)	10 COM2 multi-function connector (1 pcs) (Including flathead screwdriver)	11 COM3 multi-function connector (1 pcs)	12 CT connector (1 pcs)
			
13 10m meter communication cable (1 pcs) 3m BMS communication cable (1pcs)	14 Grounding OT terminal (1 pcs)	15 User Manual	


B Installation Location

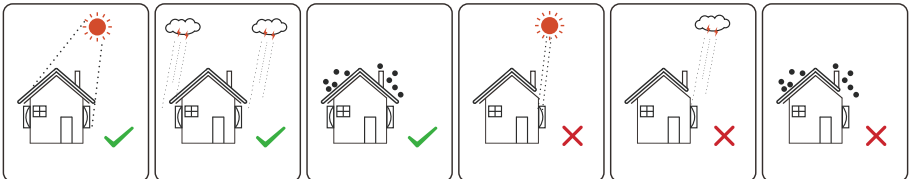


C Installation Spacing

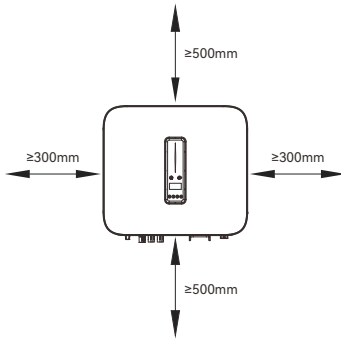


D Installation Angle

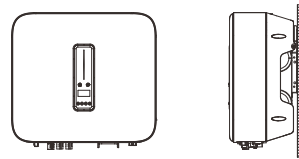


E Mark the Position and Drill Holes


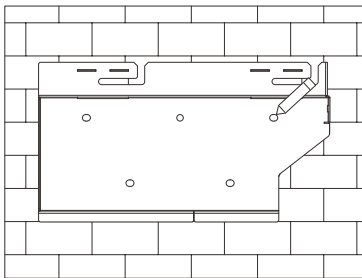


F Fix Wall Bracket


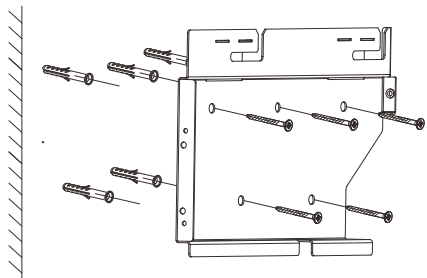


G Mounting Inverter

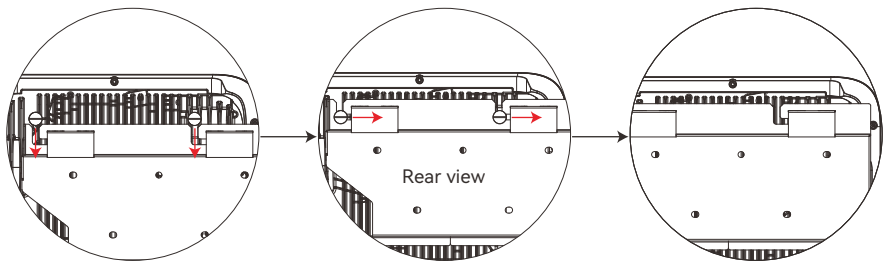

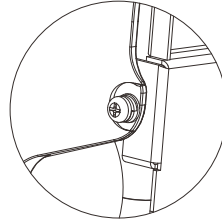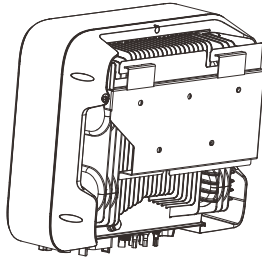

H Grounding Terminal Connection

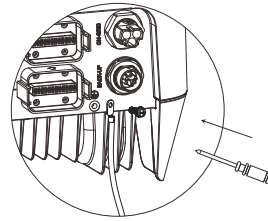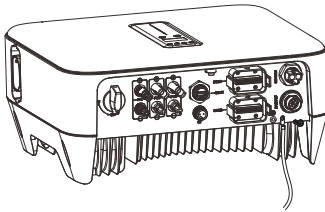

2 Electrical Connection


A Cable Requirements

Cable types	Cable requirements	
	Outer diameter	Conductor cross-section
3-Core AC Cable (On-grid side)	10-18mm	2.5-10mm ²
3-Core AC Cable (Back-up side)	10-15.5mm	2.5-6 mm ²
PV cable	5,9-8.8mm	4 mm ² (12AWG) or 6mm ² (10AWG)
Battery power cable	5-8mm	6mm ² (10AWG)


Please use the cable specified in the above table. If the conductor core of the cable is too small, which may cause poor contact between the terminal and cable.

B Electrical Wiring Diagram

Inverter connects with smart meter and CT

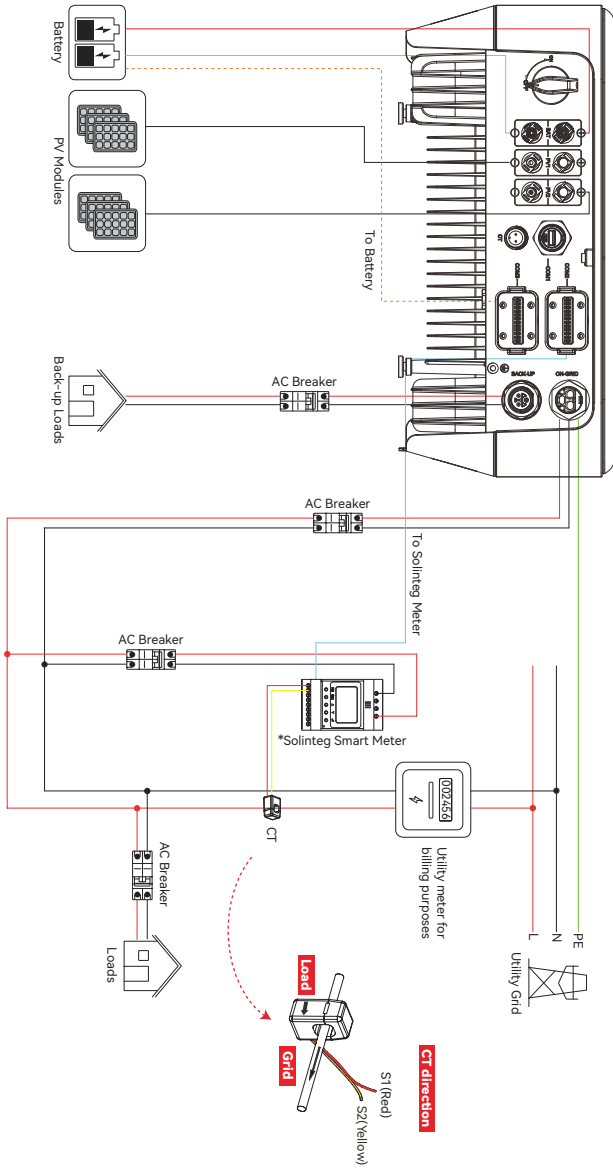


Inverter connects with a single CT

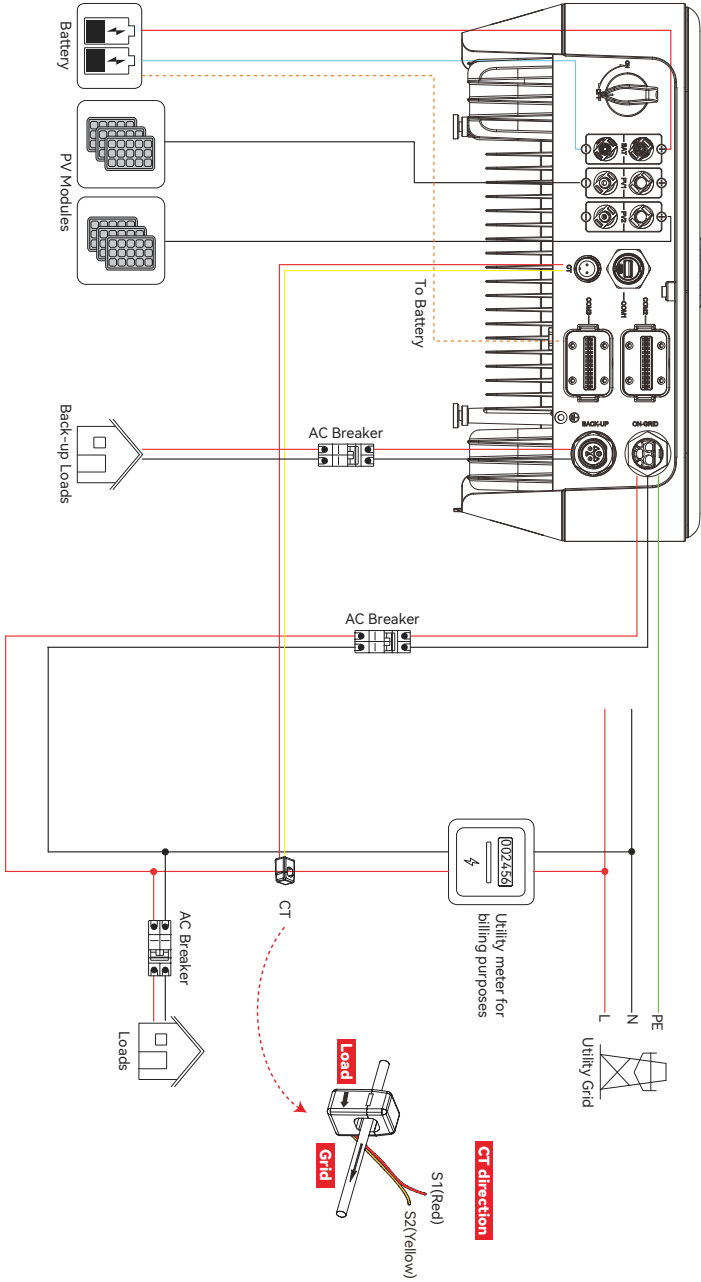


C AC Connection

On-grid AC terminal

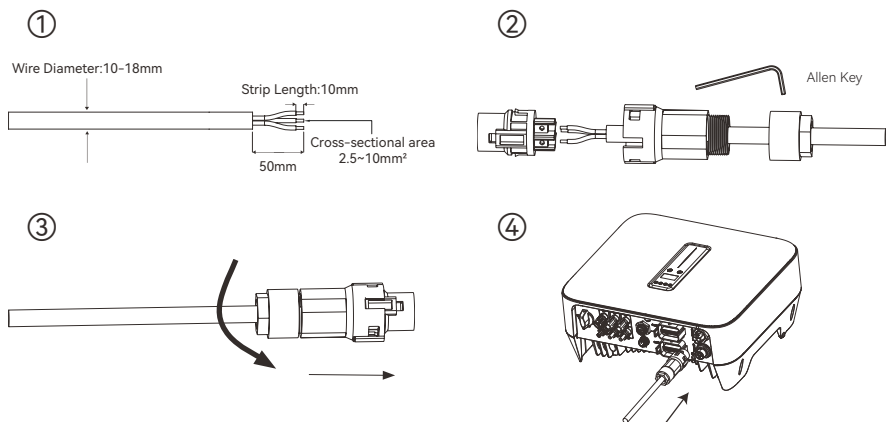


Back-up AC terminal

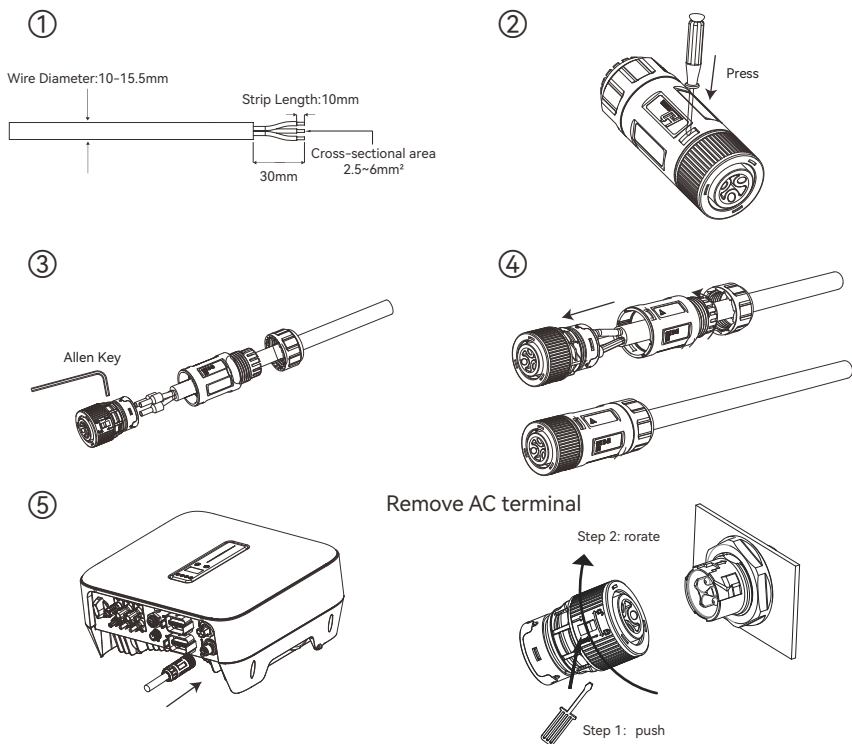


D PV String Connection


①

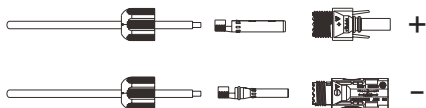


②

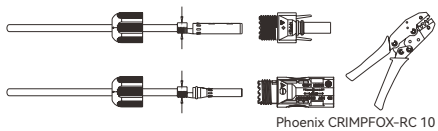


③

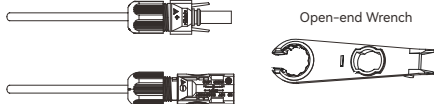

④

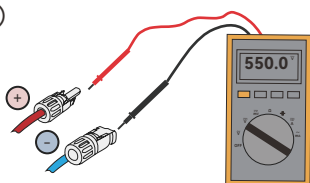


⑤

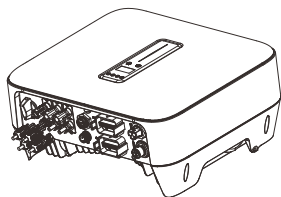


E Power Cable of the Battery Connection


①

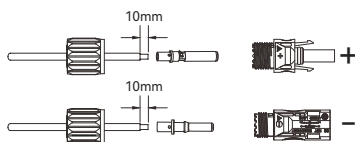


②

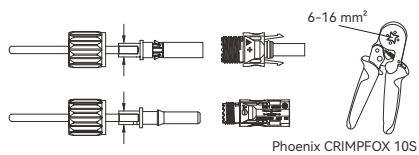


③

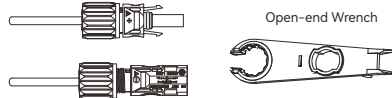

④

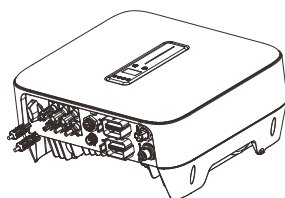


⑤

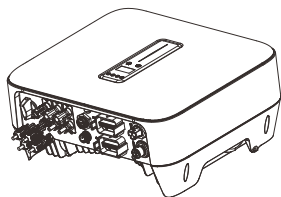

F Meter and CT Connection

M2HS-3~6K connection with a single CT

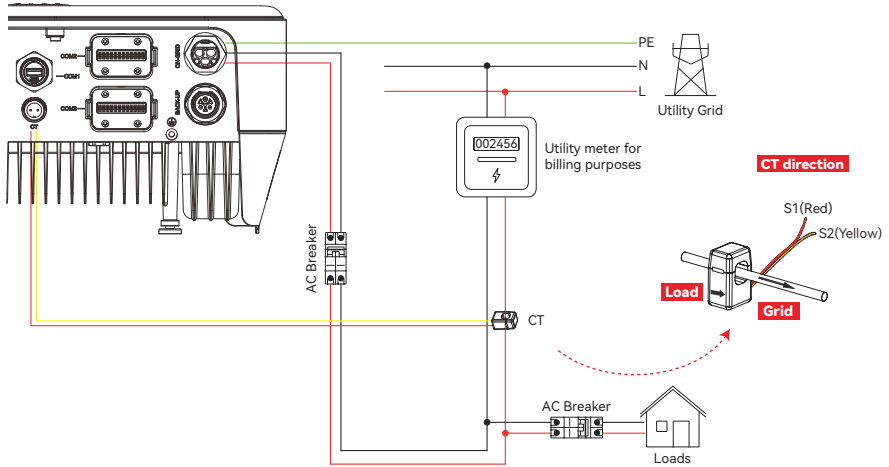


CT connector terminal definition




Port	Description
1	Connect with CT S1 or the positive pole
2	Connect with CT S2 or the negative pole


①

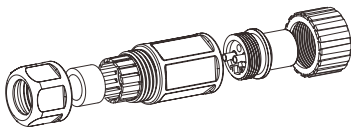

②

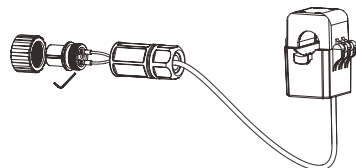

M2HS-3~6K connection with meter and CT

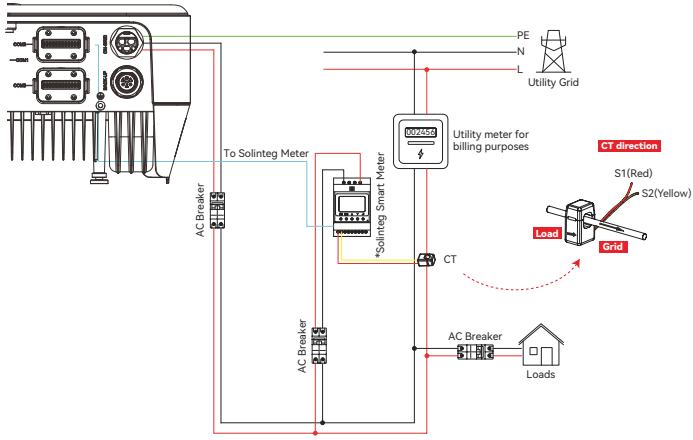


Solinteg RMM smart meter terminals definition

Item	Definition	Function
1	U_L	L/N connect to grid to detect power grid voltage
2	/	
3	/	
4	U_N	
5	I_L^*-S1	To detect the CT current and direction.
6	I_L-S2	
7	/	
8	/	
9	/	
10	/	
11	PE	Ground connection
RS485	RS485-1	/
	RS485-2	Communicate with hybrid inverter
ANT	/	/
LAN	/	/
Type-C	/	/

G


Communication Connection

Port definitions for the COM2 multi-function connector:

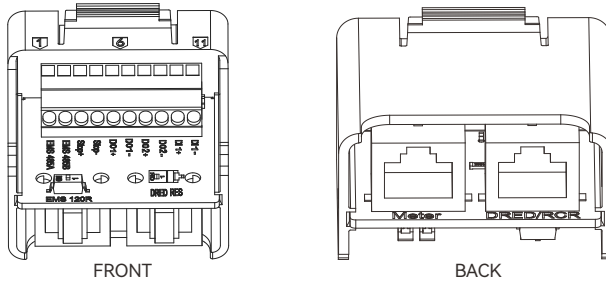

Port	Function	Remark
EMS 485A	Communicate with the EMS device	
EMS 485B		
Stop+	Connect the Emergency Stop device.	
Stop-	Normally open (NO) and normally closed (NC) status (Optional)	
DO1+	Digital output	
DO1-		
DO2+		
DO2-		
DI1+	Digital input	
DI1-		
EMS 120R	EMS communication termination resistor switch	DIP switch
DRED RES	DRED detection resistor 10kΩ Deactivate this detection resistor when using the DRED function	DIP switch
Meter	Communicate with smart meter RMM	RJ45
DRED/RCR	Connect DRED/RCR devices DRED For Australia and New Zealand RCR For Germany and some other European countries	RJ45

Port definitions for the COM3 multi-function connector:

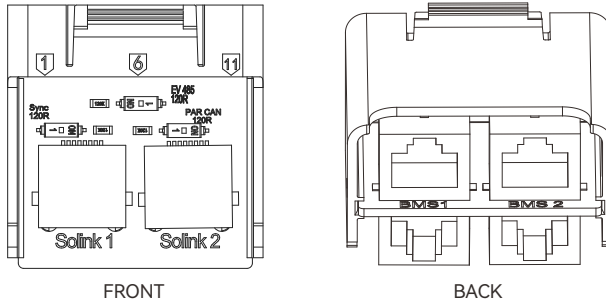


Port	Function	Remark
Solink1	For parallel system communication between Solinteg hybrid inverters, or for connections with other Solinteg devices	RJ45
Solink2		
BMS1	Communicate with the battery	RJ45
BMS2	Reserved	
Sync 120R	Synchronization signal termination resistor for parallel systems. In the parallel system, the termination resistor needs to be activated on the first and last inverters	DIP switch
PAR CAN 120R	CAN communication termination resistor for parallel systems. In the parallel system, the termination resistor needs to be activated on the first and last inverters	DIP switch
EV 485 120R	RS 485 communication termination resistor for EV charge communication.	DIP switch

RJ45 terminal connection sequence and definition as below:


	No.	Color	Solink 1	Solink 2	BMS 1	BMS 2	DRED/RCR	Meter
	1	Orange & White	Sync+	Sync+	RS485_A3	-	DRM1/5	-
	2	Orange	Sync-	Sync-	RS485_B3	-	DRM2/6	-
	3	Green & White	Power-	Power-	Encode_B	-	DRM3/7	RS485_B2
	4	Blue	CANH_P	CANH_P	CANH_B1	-	DRM4/8	-
	5	Blue & White	CANL_P	CANL_P	CANL_B1	-	REF GEN/0	-
	6	Green	Power-	Power-	Encode_A	-	COM LOAD/0	RS485_A2
	7	Brown & White	Power+	Power+	CANL_Debug	-	-	RS485_B2
	8	Brown	Power+	Power+	CANH_Debug	-	-	RS485_A2

Assembling the multi-function connector


①

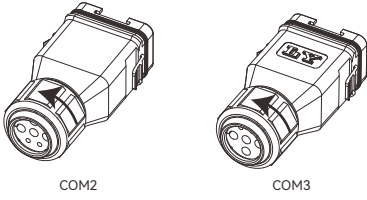

②


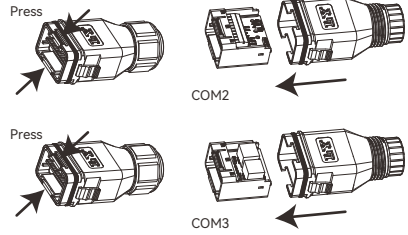


③

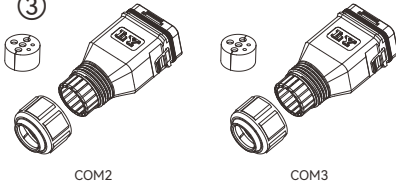


COM2 quick-connect port wiring steps


①

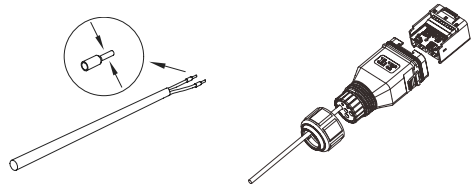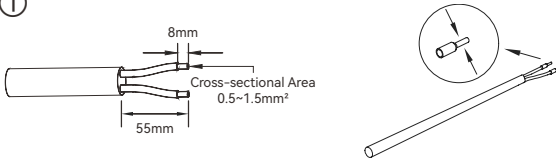


②

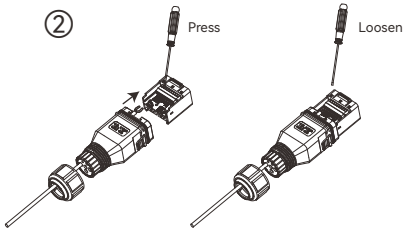


③

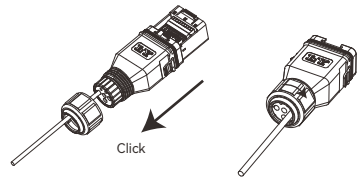



COM3 RJ45 port wiring steps

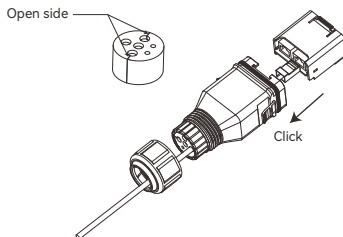

Insert the COM2 and COM3 connectors into the corresponding ports of the inverter.

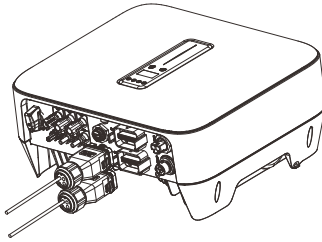

H Communication Module Installation

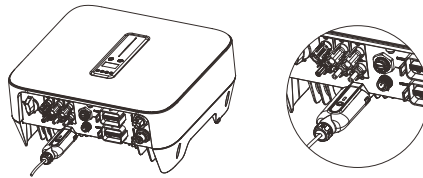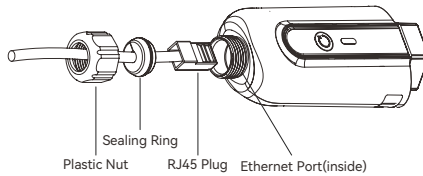

3 Commissioning

A App Preparation

① Install the Cloud monitoring App with latest version.



② Register an account on the Cloud monitoring App. If you have got the account and password from the distributor/installer or Solinteg, skip this step.

B**Inspection Before Commissioning**

Check the following items before starting the inverter:


- ① All equipment has been reliably installed.
- ② DC switch and AC circuit breaker are in the "OFF" position.
- ③ The ground cable is properly and reliably connected.
- ④ The AC cable is properly and reliably connected.
- ⑤ The DC cable is properly and reliably connected.
- ⑥ The communication cable is properly and reliably connected.
- ⑦ The vacant terminals are sealed.
- ⑧ No foreign items, such as tools, are left on the top of the machine or in the junction box (if there is).
- ⑨ The AC circuit breaker is selected in accordance with the requirements of this manual and local standards.
- ⑩ All warning signs & labels are intact and legible.

C**Commissioning Procedure**

If all of the items mentioned above meet the requirements, proceed as follows to start up the inverter for the first time.

- ① Turn on the AC breaker.
- ② Turn on the lithium battery switch. Power on the battery pack manually if a battery is equipped.
- ③ Turn on the DC switch, the DC switch may be integrated in the inverter or installed by the customer. Please wait for 5 minutes.
- ④ The inverter will operate properly if the PV and the grid meet inverter startup requirements. The time required for the inverter to connect to the grid may take a few minutes or longer, depending on the national/regional safety code selected during the initial setup and the actual grid conditions.
- ⑤ Observe the LED indicator to ensure that the inverter operates normally.

4 Inverter Indicator

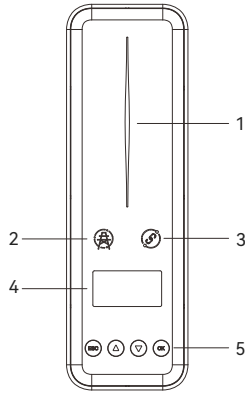

Item	Indicator	Status	Description	
1	Power and Alarm Indicator	Off	No power	
		Blue	Quick flashing	Inverter entered self-test status
			Slow flashing	Inverter entered waiting status
			Breathe flashing	Inverter works normal
		Orange	Breathe flashing	Low battery warning, the battery power is about to reach the SOC protection value
Red	Always on	An alarm or fault is detected, view the fault info on the display		
2	Grid Indicator	Off	Grid lost	
		Slow flashing	Inverter detected grid but not running in on-grid mode	
		Always on	Inverter works in on-grid mode	
3	Communication Indicator	Green	Always on	The inverter communication is running normally
			Flashing	The inverter communicates with EMS or Master inverter through RS485 or CAN
		Orange	Always on	The inverter isn't communicating with Solinteg smart meter
		Red	Always on	The inverter isn't communicating with the BMS
4	Display	Display the inverter's operational status, parameter settings, etc. Display off to save power, press the button to wake up the display.		
5	Button	Switch display information and set parameters.		


5 R2MD Communication Module

The R2MD communication module is available in multiple versions, below is the feature introduction for the WiFi & LAN version.

The WiFi & LAN R2MD module is designed for use with either WiFi or LAN communication, as well as for scenarios where both are connected simultaneously.

When both WiFi and LAN are connected, the system prioritizes LAN communication:

- ① In the event of LAN communication failure or if the LAN cable is disconnected, the WiFi & LAN R2MD will automatically switch to WiFi communication.
- ② When LAN communication is restored or the LAN cable is reconnected, the WiFi & LAN R2MD will automatically revert to LAN communication.

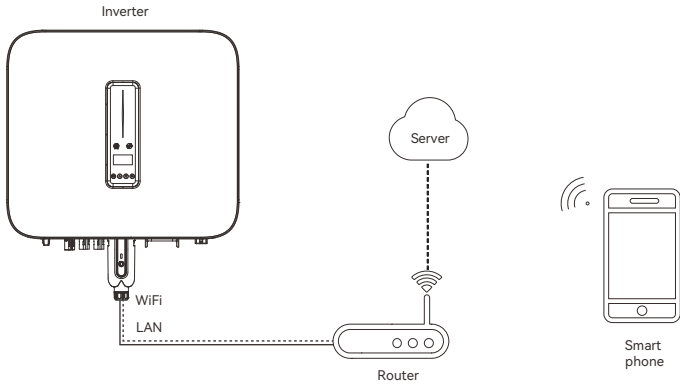

Item	Description		
Button	Press and hold for 5-10 seconds to reset network configuration		
Indicator	Off	Not correctly connected or powered on	
	Green	Quick flashing	Connecting to the server
		Slow flashing	No server configuration 1.Server domain name and port not configured or detected 2.Routing information not set up or network cable not connected
		Always on	Communicate with the server normally
	Yellow	Slow flashing	Upgrading the inverter through the R2MD
Quick flashing		The R2MD isn't communicating with the inverter	


6 Device Addition and Network Configuration in IntegHub APP

1

After logging into the APP, follow the on-screen guidance to create a power plant.

2

On the <Plants> interface, select the plant which you need to add new devices and enter it.

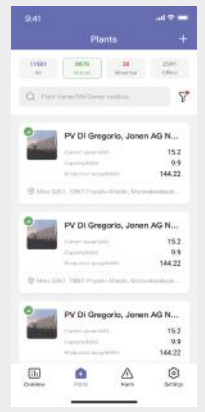

3

After entering the <Plants> section, click on <Devices>, then click the <+> in the upper right corner to add devices.




4

Click <Scan to add> and scan the QR code or barcode on the inverter's nameplate. (Alternatively, tap "Add device" to the next step.)



5

Tap <Enable Bluetooth> to turn on Bluetooth on your phone. The APP will automatically scan for nearby devices via Bluetooth.

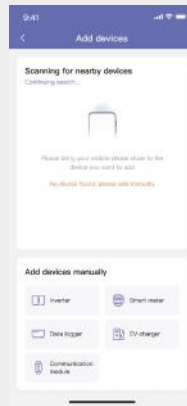

6

Once the scan is complete, the APP will display the devices for addition. Select the device you want to add.




7

Proceed to network configuration. The inverter has two configuration methods: WiFi and LAN.



8

Proceed to WiFi setting interface if you choose "WiFi". Select the desired WiFi network and enter the password. Tap <Next> to proceed, or tap <Setup later> to configure at a later time.

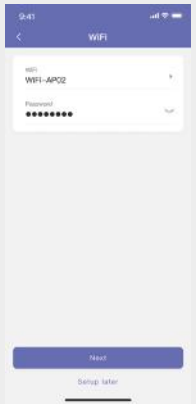

>>




9

Proceed to LAN setting interface if you choose "LAN". The DHCP function is enabled by default. If your router or switch has DHCP disabled, you can input the IP address, subnet mask, default gateway, and DNS server manually. Tap <Next> to proceed, or tap <Setup later> to configure at a later time.




10

After setting the WiFi or LAN information, the APP will go through three steps for network configuration. If any step fails, the reason for the failure will be displayed.

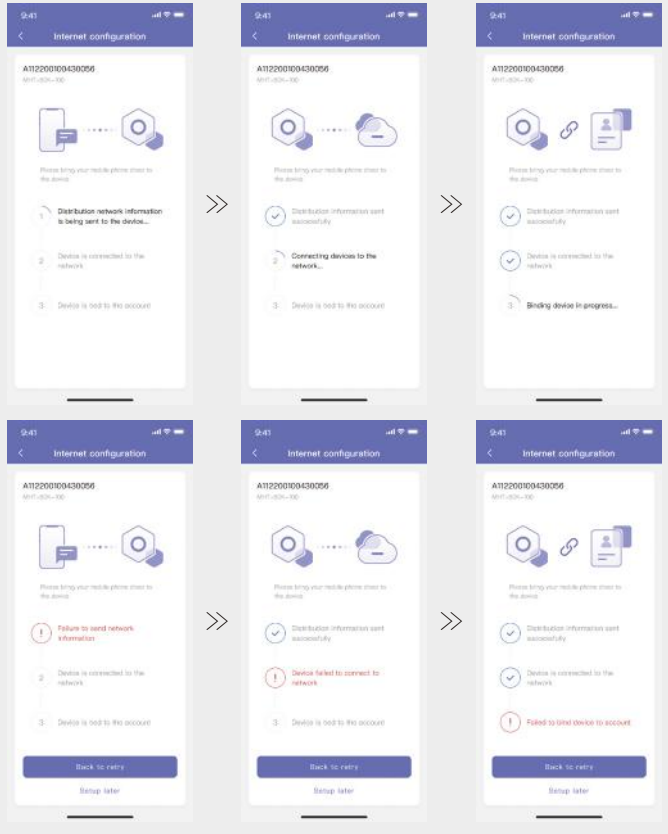


11

Once the network configuration is complete, click <Complete>.

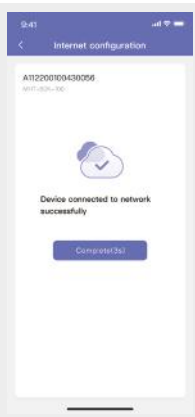

12

After finish network configuration, click <Confirm> to confirm the addition of the device. Click the edit button to rename the device.

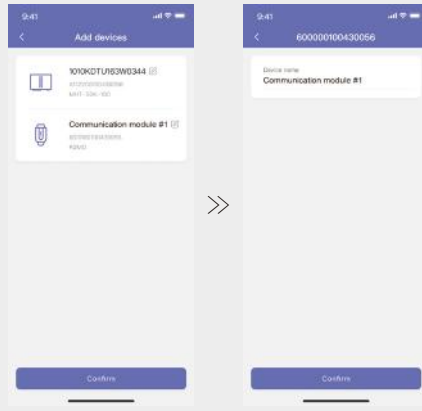

13

Entering the device details interface, you can view the device name, SN, device type, device model, communication mode (WiFi or LAN), IP address, MAC address, firmware version, and connection date.



7 About

Contact Information

Should you have any question about this product, please contact us.

We need the following information to provide you the best assistance:

- Model of the device
- Serial number of the device
- Date of the device
- Fault code/name
- Brief description of the problem

China (HQ)

Wuxi Solinteg Power Co., Ltd.

Address: Building 10, No. 52-2 Changjiang South Road, Xinwu District, Wuxi, China

Website: www.solinteg.com

Service Mail: service@solinteg.com

INTEGRATE SOLAR INTELLIGENTLY



www.solinteg.com



User Manual



M11-00054-01